

VDR

Remote Control Keys

Key	Normal	VDR	Channels
Up	Ch up	Crsr up	Crsr up
Down	Ch down	Crsr down	Crsr down
Left	Prev group	-	Page up
Right	Next group	-	Page down
Ok	Ch display	Select	Switch
Menu	Menu on	Menu off	Menu off
Back	-	Menu off	VDR menu
Red	-	Record	Edit
Green	-	Language	New
Yellow	-	Pause live	Delete
Blue	-	Stop/Resume	Mark
0..9	Ch select	-	-

Key	Timers	Edit/New	Recordings	Replay
Up	Crsr up	Crsr up	Crsr up	Play
Down	Crsr down	Crsr down	Crsr down	Pause
Left	Page up	Decrement	Page up	Search back
Right	Page down	Increment	Page down	Search forward
Ok	Edit	Accept	Play	Progress disp.
Menu	Menu off	Menu off	Menu off	Menu on
Back	VDR menu	Discard	VDR menu	Recordings menu
Red	Edit	ABC/abc	Play/Commands(2)	Jump
Green	New	Ins/Ovr	Rewind	Skip -60s
Yellow	Delete	Delete	Delete	Skip +60s
Blue	On/Off(1)	-	Summary	Stop
0..9	-	Numeric inp.	Exec cmd(2)	Editing

Replay Control

- Up Resumes normal replay from any "pause", "forward" or "backward" mode.
- Down Halts playback at the current position. Press again to continue playback.
- Blue Stops playback and stores the current position, so that playback can be resumed later at that point.
- Left
- Right Runs playback forward or backward at a higher speed; press again to resume normal speed. If in Pause mode, runs forward or backward at a slower speed; press again to return to pause mode. Pressing and holding down the button performs the function until the button is released again. If "Multi Speed Mode" has been enabled in the "Setup" menu, the function of these buttons changes in a way that gives you three fast and slow speeds, through which you can switch by pressing the respective button several times.
- Red Jump to a specific location. Enter the time you want to jump to and then press "Left" or "Right" to jump relative to the current position, "Up" to jump to an absolute position, and "Down" to jump and pause at an absolute position.
- Green
- Yellow Skips about 60 seconds back or forward. Pressing and holding down the button performs the function until the button is released again.
- Ok Brings up the replay progress display, which shows the

date, time and title of the recording, a progress bar and the current and total time of the recording. Press "Ok" again to turn off the progress display. Stops replaying and brings up the "Recordings" menu. This can be used to easily delete a recording after watching it, or to switch to a different recording.

Editing a Recording

- 0 Toggles an editing mark. If the mark indicator shows a red triangle, the current mark is deleted. Otherwise a new mark is set at the current position.
- 4, 6 Move an editing mark back and forward. You need to first jump to an editing mark for this to work.
- 7, 9 Jump back and forward between editing marks. Replay goes into still mode after jumping to a mark.
- 8 Positions replay at a point 3 seconds before the current or next "start" mark and starts replay.
- 2 Start the actual cutting process.

DVD mode

- Red Goto position (enter time)
- Green 1 min. backward
- Yellow 1 min. forward
- Blue Goto title (enter title number)
- Back Stop Replay - Exit
- Ok toggle progress display (this will mess up any subtitles)
- 8/0 Move Menu Up/Down (only if progress display on)
- Up, kPlay playback
- Down, kPause pauses playback
- Left, Right, kFastRew, kFastFwd rewind/forward (fast if play mode, slow if pause mode)
- 1 skip to next audio channel
- 2 skip to next subtitle (if "no subtitle" is reached, progress display on)
- 3 skip to next angle
- 4 skip to previous chapter
- 6 skip to next chapter
- 7, kChanDn skip to previous title
- 9, kChanUp skip to next title
- 5 DvdNavigationForce ON / go to DVD Root menu (if progress display on)
- 8 go to DVD Title menu (only available if progress display off)
- 0 go to DVD Audio menu (only available if progress

display off)

In DVD-Menu:

2/8/4/6,5 DVD menu Up/Down/Left/Right, OK control's Left/Right/Up/Down OK also work when in menuspace
 Red Leave DvdNavigationForce
 Green skip to previous title
 Yellow skip to next title
 Goto title (enter title number)

VCD mode

- Down Pause
- Left Fast backward when in 'Play' mode (ISO62107 SVCDs only)
Slow motion undefined yet (should fall back into slow fwd)
- Right Slow motion when in 'Pause' mode
Fast forward when in 'Play' mode
- 1 Skip to previous VCD entry
- 3 Skip to next VCD entry
- 4 Skip to previous VCD track
- 5 Skip to beginning of current track
- 6 Skip to next VCD track
- Ok Turn progress bar on/off
- Red Time search in units of CD-ROM MSF (see above)
- Green Skip -60s
- Yellow Skip +60s

SVCDs may contain MPEG data with two audio channels. If a second audio channel is available, VDR's toggle mechanism for audio channels will be enabled.

The 'Yellow' key in the VideoCD menu will eject the disc loaded in /dev/cdrom.

The 'Blue' key in the VideoCD menu will be enabled if the (S)VCD contains also 'segment play items'. These can be up to 1980 still images or audio/video clips placed in the (S)VCD's data track.

The viewer can be controlled with the following keys:

- 4 Skip to previous item.
- Skip to first segment of multisegment items.
- 5 Toggle between low and high resolution of still images.
- 6 Skip to next item.

Version 0.0.6 of the plugin introduces PSD controlled replay mode. This can be enabled in the setup and defines yet the following keys for replay control as required by the PSD menus:

1..9: Goto NUMERIC selection.
 Ok: Goto DEFAULT selection.
 Left: Goto PREVIOUS selection.
 Right: Goto NEXT selection.
 Back: Goto RETURN selection.
 Blue: Stop (S)VCD replay.