

## Mplayer

- Down    pause/unpause.
- Up     returns to normal replay.
- Right
- Left    skips back/forward 10 seconds.
  
- Red    enters jump mode. Enter the number of minutes/percent  
         you wants to jump with the number keys. Press "left"  
         to jump backwards, "right" to jump forward and "up"  
         to jump to the absolute position. Press "blue" to toggle  
         the jump unit between minute (m) and percent (%).  
         Any other key cancels jump mode.
  
- Blue    aborts playback.
  
- Back    aborts playback and returns to MPlayer menu.
  
- Ok     toggles progress display.
  
- 1      decrease audio delay by 0.1
  
- 2      increase audio delay by 0.1
  
- 3      increase MPlayer osd level

In addition the "Volume+", "Volume-" and "Mute" keys are routed to MPlayer.

The newest version of this reference card can be found at  
<http://www.ramge.de/olaf/vdr/>

If you have any ideas, how to improve this refcard, please mail me ([olaf@ramge.de](mailto:olaf@ramge.de))

VDR (Video Disk Recorder) by Klaus Schmidinger (<http://www.cadsoft.de/vdr/>)

VDR Logo by Jan Grell (<http://jan.grell-netz.de/>)



## Reference Card

April 25, 2004